



USER INSTRUCTION MANUAL

SUSPENSION INTOLERANCE STRAP - REF. NO. T2200

Applicable to Suspension Intolerance Strap : Ref. No. T2200

Manufacturer : GENERAL WORK PRODUCTS LLC
4912 MEHURIN STREET JEFFERSON,
LA 70121

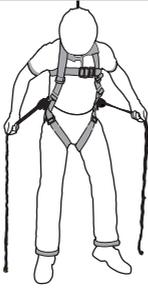
Care by Palmer Safety even after a Fall !

Avoid the effects of Suspension Trauma with the use of Palmer Safety Suspension Intolerance Strap.

- Extremely effective, specially designed to help relieve the negative effects of Suspension Trauma.
- Compact and Light-weight. Does not hamper the activity of worker while at work.
- Allow the suspended worker to stand up in his harness to relieve pressure.
- Easy to attach to the Harness with the help of the textile loop and velcro provided.
- Easy deployment, operation is fool-proof.



STEPS TO USE

	Un-zip the pouches fitted on both sides of Harness		Hold the 2 straps together		Connect the straps with each other making a loop with the help of easy-to-use buckle
	Put your feet into the loop		Stand onto the loop, so that the thigh straps are free to move		Adjust the sit strap towards the front to release pressure and give a seat-posture



More Safety, More Protection ...

It is recommended that the equipment should be inspected and examined by a competent person for any damage of failure, if the need arises. The observation should be recorded in the table below. In case a damage is observed, the equipment should be replaced immediately.

The instructions for Use, for the individual components, are to be strictly observed.

CHECK SHEET

IDENTIFICATION

Type		Date of Purchase	
Identification Mark		Date of First Use	
Batch No.		Name of Use	
Year of Manufacture		Comments	

SERVICE AND INSPECTION RECORD

S.NO.	DATE	DAMAGE OBSERVED	REPAIR MEASURES	COMMENTS

For Further Information Contact:



GENERAL WORK PRODUCTS LLC 4912 MEHURIN STREET
JEFFERSON, LA 70121